


Applying Floor Finish




Provided by:




Great Western Supply Co.

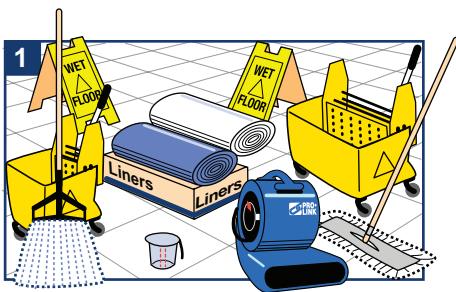


1 Gather equipment.

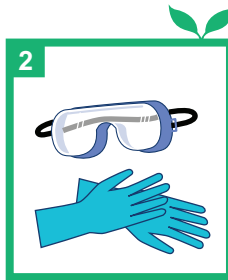


2 Wear proper personal protective equipment.

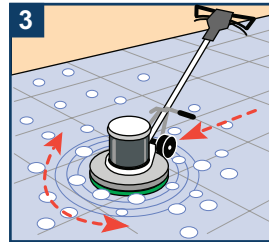


3 Strip or top scrub the floor appropriately before applying any finish. Make sure there is no residue left on the floor. Rinse if needed.

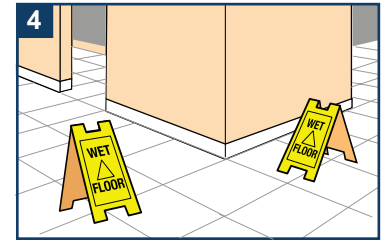

4 Place wet floor signs at all entranceways.

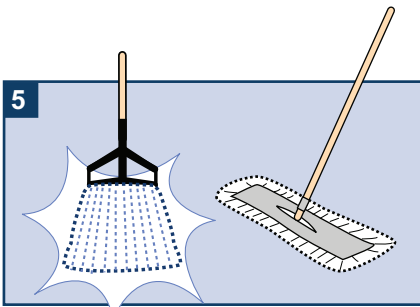


5 Use a clean finish mop. Rinse mop in clean water before using.

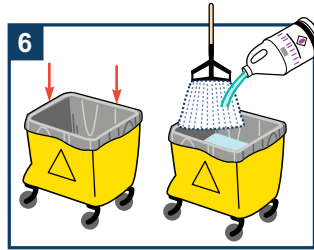


6 Line the bucket with a trash bag to protect the floor finish. Pour the finish in the bucket onto the mop to reduce foaming.




7 Wring out the bottom half of the mop until the finish stops dripping.

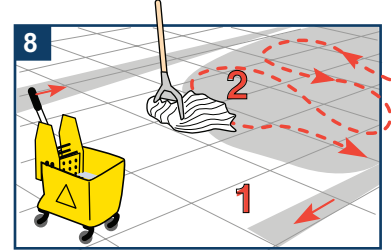


8 Outline the area. Using the figure 8 motion, fill in the area with finish. On first coat, leave it 6-12 inches away from the walls.

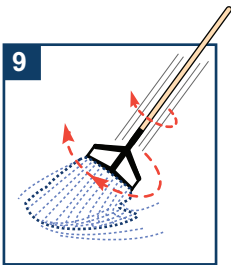

9 Flip the mop to get more finish.

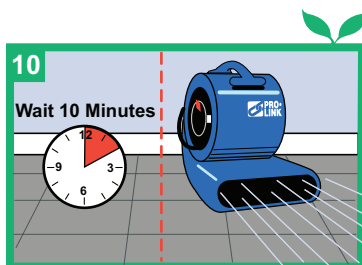

10 After at least 10 minutes, place a floor fan above the finish to speed the dry time. Ensure the fan is not blowing onto the finish.

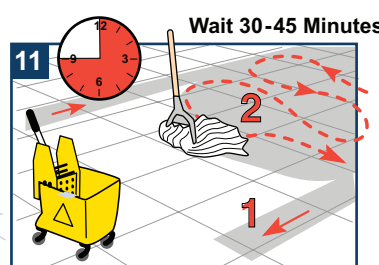

11 Wait 30-45 Minutes. Recoat when the floor finish is dry to the touch: 30 to 45 minutes depending on the weather. Temperature, humidity and ventilation will affect dry time.



12 Properly clean and store equipment.

= Green Cleaning Process

Green Cleaning Tips

- Select appropriate floor finishes that are extremely durable to minimize the strip out or top scrub process.
- Select Build a solid base of floor finish.
- Select Develop a program to maintain the floors on a regular basis, improving the life of the floor finish.
- Select Properly maintain entranceways with mats to stop soil from entering the facility and to protect the floor finish.

Great Western Supply Company

116 East 53rd Street
Davenport, IA 52806

563-445-6644

Fax: 563-445-6654

www.greatwesternsupply.com

Pro-Link, Inc.

Telephone: 800-74-LINKS

www.prolinkhq.com